

# QUICK GUIDE

## SuperView Series

Professional HD Box Network Camera

## Warning

- To reduce a risk of fire or electric shock, do not expose this product to rain or moisture.
- To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

 
## Notice

- Please check if all the items on the package list have been included in package.
- This equipment must be installed and used in strict accordance with the instructions given in the user documentation. This equipment contains no user-serviceable components. Unauthorized equipment changes or modifications will invalidate all applicable regulatory certifications and approvals.
- Video and audio surveillance can be prohibited by laws that vary from country to country. Check the laws in your local region before using this product for surveillance purposes.
- When transporting the Anviz product, please use the original packaging or equivalent to prevent damage to the product.


# Packing List



① Camera  
x1



② Bracket  
x1

 

③ Lens  
x1



④ Cable Clamp  
x1



⑤ Antenna  
x1



⑥ Mounting Templates  
x1



⑦ Screws  
x3



⑧ Inner Hexagon Spanner  
x1



⑨ Quick Guide  
x1



⑩ Software CD  
x1


## Note:

The model with "-E" suffix :The camera with PoE function


The model with "-W" suffix: The camera with WiFi function.

⓪ is only for model with "-W"

# Product Introduction

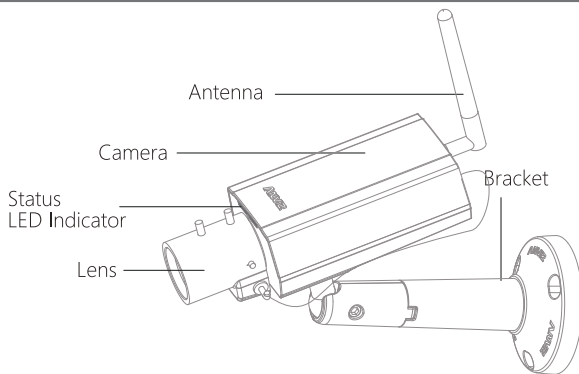


Status LED Indicator	
Green	Normal operation
Yellow	Alarm
Red	System abnormal

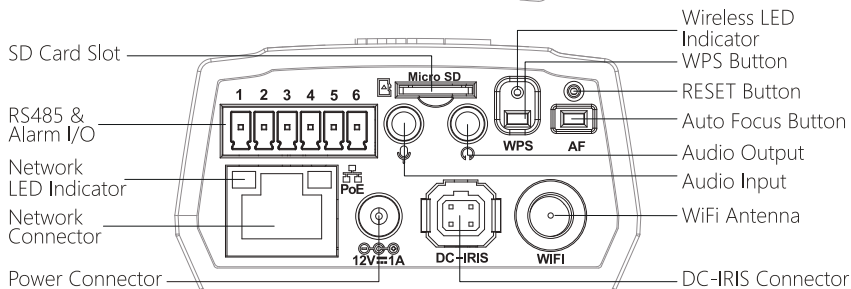


RS485 & Alarm I/O					
Port 1	Port 2	Port 3	Port 4	Port 5	Port 6
RS485-B	RS485-A	GND	Alarm Out	GND	Alarm In

# Installation

## 1. Assemble the camera.

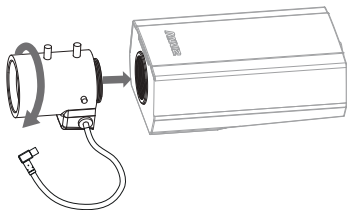


a. Install the lens.

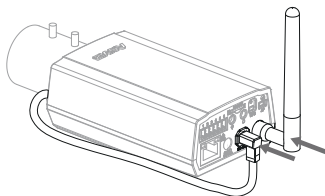


b. Connect cable to DC-IRIS interface and install a WiFi antenna\* on the back end of camera.

\* WiFi antenna is used in "-W" model.

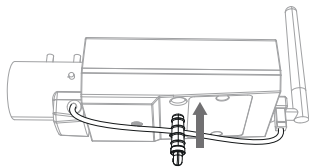



c. Push the hook in camera to fix calbe of lens.

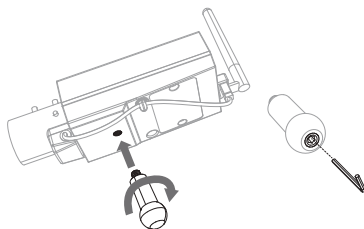

d. Screw the part of bracket to camera and use hexagon spanner to tighten it.



# Installation

2. Install the bracket: Loosen the screw on the bracket and fix the screws on the wall or ceiling to install the bracket.

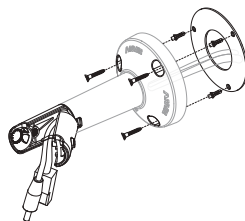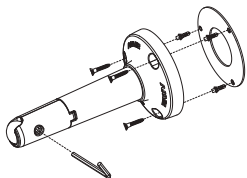

Pull the wiring through the hole and supplied bracket.

3. Install camera to bracket. a. Adjust the direction of camera; b. Tighten the screw on bracket. c. Connect the wiring (network cable or power cable) to the camera.

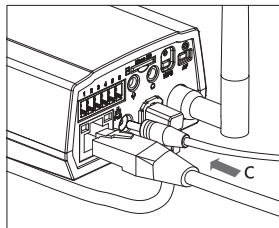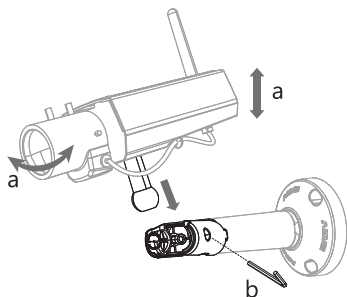




## View Via Web Browser

Default configuration of IPC:

- IP address: 192.168.100.100
- User name: admin
- Password: admin

Take Windows7 and IE10 for example.

1. Input the IP address of the camera in address bar and press [Enter].

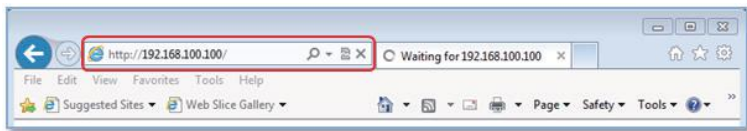

2. Input the "Username" (admin) and "Password"(admin) in the dialog box, and click "OK".





## View Via Web Browser

### 3. View the image.



#### Note:

- Need to install the ActiveX control after step 1.
- Add IP address into trusted sites list and set the security level to [Medium] in IE browser [Tools/Internet Options/Security/Custom Level/Reset to...]
- System requirement: Microsoft Windows Operating System and Internet Explorer (Version 7.0 or later). IE8 is recommended.

#### Further information:

The user's manual and hardware instruction are available from the Anviz website at [www.anviz.com](http://www.anviz.com) or from the Anviz Network Video Product CD supplied with this product.



For more information, visit [www.anviz.com](http://www.anviz.com), or email us [support@anviz.com](mailto:support@anviz.com).

2016 © Anviz Global. All Rights Reserved.