



# **Electrochemical Gas Detection Module**

User's Manual V3.0

(Model: ZE03)

Issue Date 2022-11-25

Zhengzhou Winsen Electronics Technology Co., Ltd

**Statement** 

This manual copyright belongs to Zhengzhou Winsen Electronics Technology Co., LTD. Without the

written permission, any part of this manual shall not be copied, translated, stored in database or

retrieval system, also can't spread through electronic, copying, record ways.

Thanks for purchasing our product. In order to let customers use it better and reduce the faults

caused by misuse, please read the manual carefully and operate it correctly in accordance with the

instructions. If users disobey the terms or remove, disassemble, change the components inside of

the sensor, we shall not be responsible for the loss.

The specific such as color, appearance, sizes ...etc., please in kind prevail.

We are devoting ourselves to products development and technical innovation, so we reserve the

right to improve the products without notice. Please confirm it is the valid version before using this

manual. At the same time, users' comments on optimized using way are welcome.

Please keep the manual properly, in order to get help if you have questions during the usage in the

future.

Zhengzhou Winsen Electronics Technology CO., LTD



#### **Electrochemical Detection Module ZE03**

ZEO3 is a general-purpose and high-performance electrochemical module. It uses three electrodes, electrochemical gas sensor and high-performance micro-processor. By installing different gas sensor, the module could detect relevant gas. It is with built-in temperature sensor to make temperature compensation, which makes it could detect the gas concentration accurately. It has the digital output and analog voltage output at the same time which facilities the usage and calibration and shorten the development period. It is a combination of mature electrochemical detection principle and sophisticated circuit design, to meet customers' different detection needs.

## **Features**


High sensitivity & resolution
Low power consumption
UART and analog voltage output
Good stability and excellent anti-interference ability

# **Main Application**

Portable and fixed gas detector, various gas detection equipment and occasion.

# **Technical Parameters**

Model No.	ZEO3				
Target Gas	CO, O2, NH3, H2S, NO2, O3, SO2, CL2, HF, H2, PH3, HCL etc				
Measurement Range	Refer table 2.(can be customized also)				
Working Voltage	DC 5±0.1V				
Working Current	CO, O2, NH3, H2S, NO2, O3, SO2, CL2, HF, H2, PH3, HCL etc  Refer table 2.(can be customized also)  DC 5±0.1V  < 10 mA  UART Output (TTL electrical level,3V)  Analog Voltage (refer table2. for sensor original amplifying signal)  2 years (in clean air)  Temp.: -20~50°C  Humidity.: 15%~90 % RH (no condensation)  Temp.: -20~50°C  Humidity.: 15%~90 % RH (no condensation)  Ø23.3mm*31.2mm  O2: <25g				
	UART Output (TTL electrical level,3V)				
Output Data					
Working Life	2 years (in clean air)				
	Temp.: -20~50°C				
Operating Environment	,				
	Temp.: -20~50°C				
Storage Environment					
Size	Ø23.3mm*31.2mm				
Weight	O2: <25g Others: <15g				

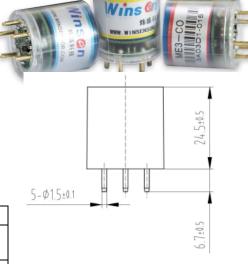

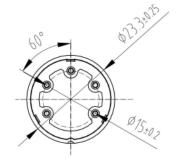


Fig1. Structure view from side and bottom (unit is mm)

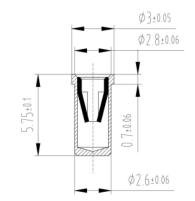


Fig2. Socket size for module (unit is mm)



#### **Detection range and signal output** Table 2

No.	Gas Code	Detected Gas	Range Resolution		Voltage output range	Response time(T90)
1	0x02	NH3	(0-100)ppm 1ppm		(0.6-3) V	≤150S
2	0x03	H2S	(0-100)ppm	1ppm	(0.6-3) V	≤30S
3	0x04	СО	(0-1000)ppm	1ppm	(0.6-3) V	≤30S
4	0x05	02	(0-25) %VOL	0.1 %VOL	(1.5-0) V	≤15S
5	0x06	H2	(0-1000)ppm	1ppm	(0.6-3) V	≤120S
6	0x08	C2H4	(0-100)ppm	0.1ppm	(0.6-3) V	≤120S
7	0x17	НСНО	(0-50)ppm	0.1ppm	(0.6-3) V	≤120S
8	0x2A	03	(0-10) ppm	0.1ppm	(2-0) V	≤120S
9	0x2B	SO2	(0-20) ppm	0.1ppm	(0.6-3) V	≤30S
10	0x2C	NO2	(0-20) ppm	0.1ppm	(2-0) V	≤30S
11	0x2E	HCL	(0-10)ppm	0.1ppm	(2-0) V	≤60S
12	0x2F	HCN	(0-100)ppm	0.1ppm	(0.6-3) V	≤120S
13	0x31	CL2	(0-20) ppm	0.1ppm	(2-0) V	≤60S
14	0x33	HF	(0-10)ppm	0.1ppm	(2-0) V	≤60S
15	0x34	ETO/VOC	(0-100)ppm	0.1ppm	(0.6-3) V	≤120S
16	0x45	PH3	(0-1000)ppm	0.1ppm	(0.6-3) V	≤30S
17	0x46	DG01 (odor)	(0-50) ppm	0.01ppm	(0.6-3) V	≤120S

**NOTE**.Left side value of detection range (zero point) is corresponding to left side value of voltage output range ,**BUT** right side value of detection(max detection value) is **NOT** corresponding to the right side value of voltage output range.

Take ZE03-O2 (0-25%vol) as an example: 0%vol is corresponding to 1.5V, but the corresponding value of 25%vol is not the fixed value of 0V, it may be other values like 0.1V or 0.2V.

#### Pin definition table3.

GND	Ground		
VCC	Power supply		
VO	Original Voltage output		
RXD	Series port input		
TXD	Series port output		

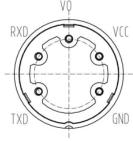


Fig3.Bottom view

The meaning of VO (Vout): It means original voltage (linear) after amplifying circuit, rather than concentration value of current target gas in environment. If choose this output way, users need to know the zero voltage Vout0 and test voltage Vout1 which can be shown in the ZEO3 module inspection record (if users choose UART way, this document is not needed. This document is not supplied by default). Users can calculate gas concentration of current target gas in environment based on Vout0 and Vout1.

**Take ZE03-CO** for example: zero voltage Vout0 = 0.6 V, its corresponding concentration N1=0ppm; in 200ppm CO gas, Vout1=0.9 V, its corresponding concentration N2=200ppm, If the current voltage Voutx=1.2 V, then the current CO concentration:

Nout X= 
$$N1 + \frac{Vout X - Vout 1}{Vout 2 - Vout 1} * (N2 - N1) = 0 + \frac{1.2 - 0.6}{0.9 - 0.6} * (200 - 0) = 400 \text{ppm}$$

Tel: 86-371-67169097/67169670 Fax: 86-371-60932988 Email: <a href="mailto:sales@winsensor.com">sales@winsensor.com</a>



#### **Communication Protocol**

#### 1.General Settings

Baud Rate	9600
Data Bits	8
Stop Bits	1
Parity	None

## 2. Communication Specification

The default communication type is active upload and it sends gas concentration once every other second (the concentration is 16 hexadecimal). If you want to switch to Q&A mode, please send 0x78 command, to change communication mode to 0x04(Q&A mode), then current concentration will be returned by module after it receiving 0x86 command (reading concentration), suggested communication cycle is 1s.

#### 3. Communication Commands

The default mode is active upload mode, the sensor will send gas concentration actively as follow without sending any command by users.

Receive	0	1	2 3 Gas concentration		4	5	6	7	8
	Start byte	Command			Gas No	number of decimal	reserved	reserved	Checksum
	0xFF	0x86	High byte	Low byte	0x05	0x01	0	0	0xA3
EXP.	FF 86 <b>00 D1</b> 05 01 00 00 A3 (Take O2 for example, its concentration is 20.9% in air)								

gas concentration=(High byte\*256+Low byte)\*resolution.

**Please note** in the calculation formula, the High byte and Low byte means the decimalism value changed from hexadecimal.

Number of decimal is 0, resolution is 1ppm, number of decimal is 1, resolution is 0.1ppm, number of decimal is 2, resolution is 0.01ppm.

**0X78—To modify the communication mode** (0x03 is active upload mode, 0x04 is Q&A mode)

0776 10	inouny the co	Jimmameat	ion mode (o	100 10 400	ive uploau mic	ac, oxo	1 13 QQ	, tilloucj			
1	0x78		To change communication mode								
Send	0	1	2	3		4	5	6	7	8	
	Start Byte	Address	Command	Communication Type						Checksum	
	0XFF	0X01	0x78		0x04	0	0	0	0	0x83	
EXP.	FF 01 78 04 00 00 00 83 (to switch to Q&A mode)										
	0 1 2 3 4 5 6 7								8		
	Start Byte Command Return									Checksum	
Receive	0XFF	0X78	Succes Failur		0	0	0	0	0	0x87 0x88	
EXP	FF 78 01	00 00 0									

If users want to switch to active upload mode, send FF 01 78 03 00 00 00 00 84(hexadecimal).

Tel: 86-371-67169097/67169670 Fax: 86-371-60932988 Email: <u>sales@winsensor.com</u>



1	0x86		To read concentration								
	0	1	2		3	4	5	6	7	8	
Send	Start Byte	Address	Comman	d	1	1	1			Checksum	
	0XFF	0X01	0x86		0	0	0	0	0	0x79	
EXP.	FF 01 8	36 00 00	00 00 00 00 00 79								
	0	1	2		3	4	5	6	7	8	
Receive	Start Byte	Command	Gas Conce	Gas Concentration			number of decimal	reserved	reserved	Checksum	
	0XFF	0X86	High byte	Low	byte	0x05	0x01	0	0	0xA3	
EXP.	FF 86 <b>00 D1</b> 05 01 00 00 A3 (Take O2 for example, its concentration is 20.9%vol in air)										

gas concentration=(High byte\*256+Low byte)\*resolution

**Please note that** in the calculation formula, the High byte and Low byte means the decimalism value changed from hexadecimal.

#### 4. Checksum and calculation

}



#### **Cautions**

- 1. Please do not take away or plug the sensor in the module.
- 2. It is prohibited to weld the pins of the module. The matched sockets could be welded.
- 3. Sensor shall avoid organic solvent, coatings, medicine, oil and high concentration gases.
- 4. Excessive impact or vibration should be avoided.
- 5. Please keep the modules warming up for at least 5 minutes when first using. 24 hours aging time are suggested if power off for long time.
- 6. Please do not use the modules in systems which related to human being's safety.
- 7. Please do not use the modules in strong air convection environment.
- 8. Please do not expose the modules in high concentration organic gas for a long time.
- 9. Returned data of module serial port is real-time concentration of current target gas in environment, If you don't have standard gas, please do not use standard command, for it will cause calibrated data is clear away and returned data of serial port is not accurate.
- 10. To judge whether module communication is normal, it is advisable to use tools that can change USB to TTL(communication level 3V), debug assistant software via serial port, and determine it by communication protocol.
- 11. When choosing module, users should choose products of different applications and ranges. If there is no special requirement, products will use conventional range.

Zhengzhou Winsen Electronics Technology Co., Ltd

Add: No.299, Jinsuo Road, National Hi-Tech Zone,

Zhengzhou 450001 China **Tel:** +86-371-67169097/67169670

Fax: +86-371-60932988

**E-mail:** <u>sales@winsensor.com</u> **Website:** <u>www.winsen-sensor.com</u>